

Easi-Speak™ PRO



Please Read All Instructions Carefully Before Using

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

- Please retain these instructions for future reference.
- Easi-Speak™ PRO contains a non-replaceable, rechargeable battery.
- Do not attempt to remove the battery.
- Do not allow your Easi-Speak™ PRO to come into contact with water or other liquids.
- In the event of an electro-static discharge, your Easi-Speak™ PRO may malfunction. In this case, you may need to connect to a computer to reset it.
- Warranty is void if the case is opened for any reason
- The warranty does not cover any data loss from the unit nor any consequential loss of information.

FCC compliance

NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are

designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Know Your Easi-Speak™ PRO



Easi-Speak™ PRO Controls

There are two sets of controls which are used to control the Easi-Speak™ PRO:

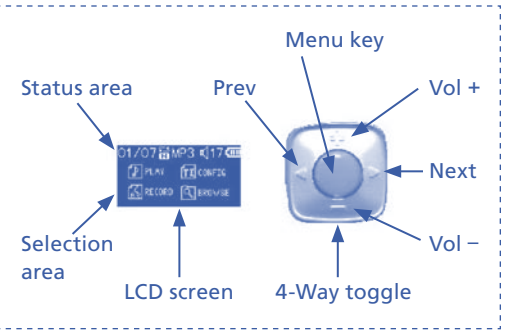

Recording & Playing your First Track

- Switch on the Easi-Speak™ PRO by sliding the On-off switch until the Status LED is orange (steady or flashing), indicating it is in standby mode
- Press and release the Record button (red ring). After a second or so, the Status LED will change to red indicating it is recording
- Speak or sing clearly into the top of the microphone from approximately 6–12 inches away
- The recording can be paused at any time by pressing the Record button briefly. The Status LED will flash to show the recording has been paused. Simply press the Record button again to continue recording
- When you are finished recording, press the Record button, and **hold for 2 seconds**, to stop the recording and save it as the last track. The Status LED will change to orange (steady or flashing)
- Alternatively, you can press and hold the Record button during the entire recording and release it when you have finished recording
- Press the Play button (green ring) to play your track. The Status LED is green while the track is playing
- When the track is finished, Easi-Speak™ PRO will return to standby and the Status LED will be orange

Recording & Playback Modes

Easi-Speak™ PRO can record and play back files in two formats: MP3 or WAV files. Depending on your application, you may want to use one of these formats rather than another. For instance, much podcasting is done using MP3 files so this would be the best format if you wanted to make podcasts. For information on recording lengths for both formats, see page 15.

Status LED

The Status LED provides you with a clear indication of what is happening with your Easi-Speak™ PRO. Please take note of the following information so that you can get the best results.

- Flashing orange: Ready to Play/Record MP3 file
- Steady orange: Ready to Play/Record WAV file
- Steady green: Playback (or fully charged)
- Flashing green: Playback paused

- Steady red: Recording
- Flashing red: Recording paused
- Flashing red/green: Charging
- Flashing orange/green: Battery low

Pausing or Stopping a Track

- Press the Play button (green ring) to play a track. The Status LED will shine steady green
- Press the Play button again to pause the track at the current place. The status LED will flash green
- Press the Play button again to resume playback
- To stop a playing track completely, press and hold the Play button for 2 seconds

Fast Forward & Reverse

- While a track is playing or paused...
- Press and hold the Prev or Next track button on the 4-way toggle switch
- The Status LED will flash green and will move within the current track at a fast rate
- When the button is released, Play or Pause will continue at the new position within the track
- The Play position will not pass beyond the start or end of the current track

Moving Between Tracks

- While a track is playing or paused...
- Press the Prev or Next track button on the 4-way toggle to move to the selected track

Charging the Battery

Easi-Speak™ PRO is supplied with a partially charged battery and can be used immediately without charging first. The battery can be charged by connecting to the USB port of an active computer or the charger. No software is required:

- Connect Easi-Speak™ PRO to the USB port or charger (not included)
- The Status LED will flash red and green (or orange if connected to the separate charger)
- When Easi-Speak™ PRO is fully charged, the Status LED will change to steady green
- A complete charge of a fully discharged battery will take about 4 hours

Using the Menu System

The LCD on the Easi-Speak™ PRO provides a multi-level menu system that allows you to select certain configurations, manage the sound files and select recording and playback functions.

The display includes two separate parts: the status area at the top in yellow and the selection area at the bottom in blue.

Standby Screen



The Standby screen is the first screen shown when the Easi-Speak™ PRO is switched on.

01/07 active track is number 1 out of 7 tracks

repeat mode setting

MP3 record/playback mode is MP3

volume is set to 17

battery is fully charged

Playback Screen



During playback, the central part of the screen shows the name of the track currently playing.

playing track 1 of 24

now 6 seconds into a 39-second track

playing track

playing is paused

Recording Screen



Recording in MP3 mode

Recording in WAV mode



recording track



recording is paused



battery 50% full

Config Menu

Selecting the CONFIG item from the standby screen, displays a menu of configuration settings:

Rec Recording mode: MP3 or WAV

Backlight Defines the length of time backlight is on after the last keypress; press any key to activate backlight.

Language Select from the available languages for the menu system. Note that this does not change the standby screen

System Info Displays firmware version and available memory

Browse Menu

Selecting the BROWSE item from the standby screen displays the files and folders internal to the Easi-Speak™ PRO.

When you select a folder, the display changes to show the files and sub-folders within the selected folder.

Select “Parent Folder” to go back one level.

When you select a file, you can then choose whether to play the selected file or delete it.

Connecting to a PC or Apple Mac

Remove the end cap covering the USB connector, by pulling off, and switch off the Easi-Speak™ PRO

Plug the Easi-Speak™ PRO into an available USB socket

The first time Easi-Speak™ PRO is connected to the PC, it will automatically install the drivers and may require the PC to be rebooted depending on your operating system

If there is not sufficient space around the USB socket, then use the USB extension lead provided

The PC or Mac will recognize the device as a USB mass storage device and it will appear as a removable drive in the file explorer window

The tracks you have recorded will appear in the folder MIC_REC. Use this same folder to copy MP3 or WAV files for playback on Easi-Speak™ PRO

You can delete from, add files to, or format the Easi-Speak™ PRO directly from the computer if you wish

Installing & Using Audacity

Audacity is provided with Easi-Speak™ PRO for your convenience. Learning Resources® does not support it or provide any warranty for its use. It is not part of the Easi-Speak™ PRO product

Audacity is a free, open-source software for recording and editing sounds. It is available for Mac OS/X, Microsoft Windows, GNU/Linux and other operating systems

Connect Easi-Speak™ PRO to your PC or Mac and browse to the Audacity folder (contains release 1.2.6)

For Windows, run the file *audacitywin.exe*

For Mac OS/X (PPC), run *audacitymac.dmg*

You may find it easiest to copy the folder to your PC or Mac before doing this

Instructions, latest versions for all operating systems and licence information for Audacity can be found at <http://audacity.sourceforge.net>

Technical specification

Records directly into MP3 or WAV file format

128MB of flash memory, up to 4 hours recording

MP3: Bit rate: 128 kbps (44 kHz sampling)
Max time: Approx 2 hours

WAV: Format: IMA ADPCM
Bit rate: 64 kbps (4 bits per sample)
Max time: Approx 4 hours

For maximum recording time, delete the Audacity and user manual folders to give additional memory space

Built-in 300mAH Lithium-ion Polymer battery

Battery supplied partially charged (50%–90%)

28 mm Loudspeaker and microphone in the top

Two stereo 3.5 mm headphone sockets (green)

One stereo 3.5 mm line-in socket ,100mV RMS Max, (pink)

Power consumption:
75mA standby
100mA recording
80–120mA playback (depending on volume)

Battery life approx 3 hours of recording or playback

Troubleshooting

Easi-Speak™ PRO is designed to work reliably and predictably in all normal conditions. However, it is possible that problems may occur. Please check the following before contacting technical support:

Problem	Status LED appears to flash randomly
Solution	Battery is low. Charge the battery
Problem	Missing Start or End of Recording
Solution	Easi-Speak™ PRO automatically fades in and out of recording & playback. Ensure you leave a second or two at start and end
Problem	Files corrupt or buttons don’t work
Solution	Format the drive in Windows (use the FAT format, not FAT32)
Problem	LED flashes red during Record
Solution	Memory is full. Delete some files
Problem	Some tracks do not appear to play
Solution	Tracks may be in the alternative format. Try swapping between MP3 and WAV formats
Problem	Status LED doesn’t come on
Solution	Battery completely drained, recharge

Support & Warranty

This product is provided with a one-year warranty for problems found during normal usage. Mistreating the Easi-Speak™ PRO or opening the unit will invalidate this warranty. Any data stored on the unit and any consequential loss is not covered by this warranty. The battery is not user replaceable.

All out-of-warranty repairs will be subject to a replacement fee.

Please visit www.LearningResources.com for the latest product information and technical support.

Easi-Speak™ is a registered trademark of TTS Group Ltd.

© Learning Resources, Inc., Vernon Hills, IL (U.S.A.)
Please retain our address for future reference.
Made in China. LRM4408-GUD
Fabriqué en Chine. Informations à conserver.
Made in China. Bitte bewahren Sie unsere
Adresse für spätere
Nachfragen auf.
Conservar estos datos.
Hecho en China.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.



Visit our website to write a product review or to find a store near you.

RISQUE D’ÉTOUFFEMENT. Petites pièces.
Interdit aux enfants en dessous de 3 ans.
ERSTICKUNGSGEFAHR. Kleine Teile.
Nicht geeignet für Kinder unter 3 Jahren.
PELIGRO DE ASFIXIA. Piezas pequeñas.
No se recomienda para menores de 3 años.